

Wall Installation - Trimming Panels

Two Piece Joiner J - The two piece Joiner J channel and closure are designed to go together to finish panel sections where it is necessary to add the trim after the panels have been installed (Fig.38). The Closure # 705 is part of the water dispersion design (Fig.39) + (Fig.41).

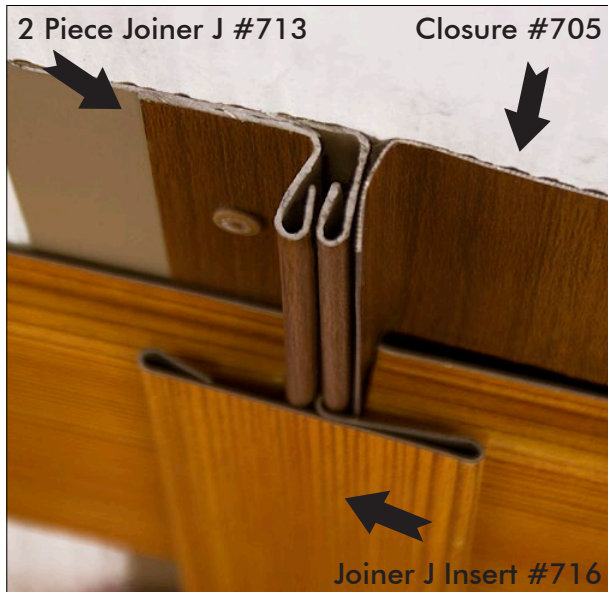


Fig.38

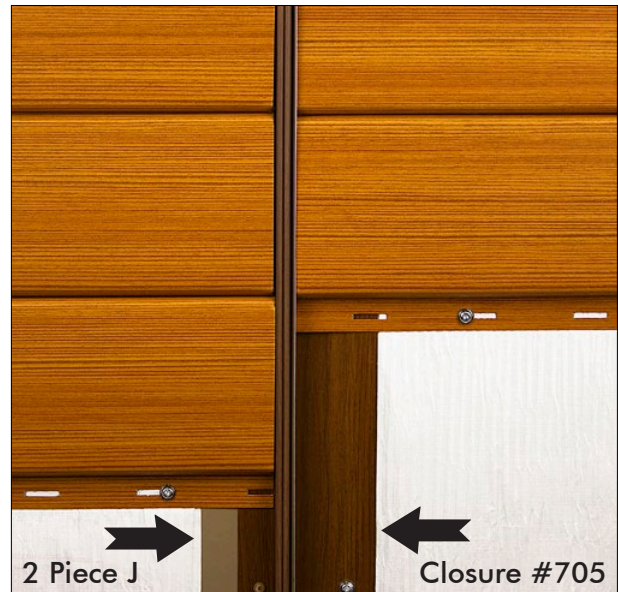


Fig.39

Step 1: Install the two piece Joiner J and closure back to back (Fig.39) + (Fig.41).

Step 2: Set the standard panels in place and fasten (Fig.39).

Step 3: Finish installation by installing the Joiner J Insert #716 (Fig.41).

The finished installation will provide you with a clean aesthetic that also accommodates water drainage (Fig.38).

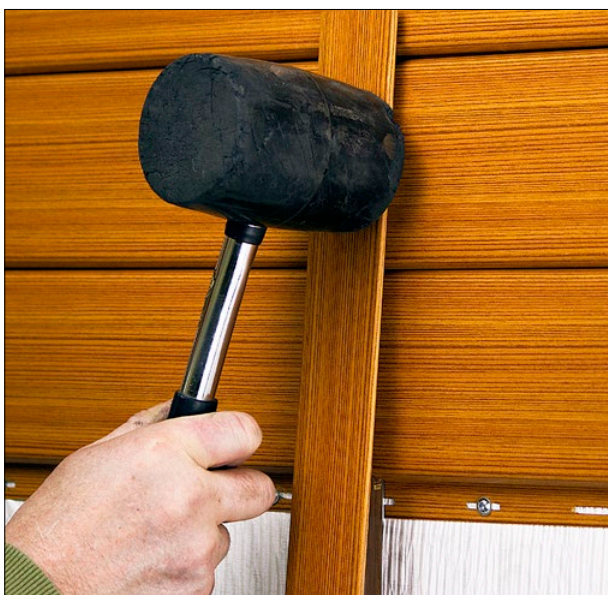


Fig.40

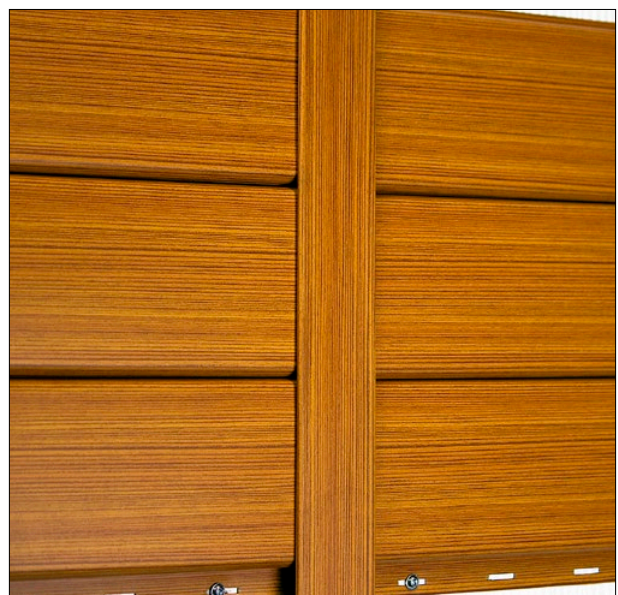


Fig.41