

Wall Installation - Horizontal



Fig.19

* All walls must be prepared with proper rain screen and vapour barrier that meet local building codes prior to installation of LUX panels.

Install J channels at the top under the eaves or flashing as required (Fig.19).

Begin the panel installation by sliding the panel into the J channel with the screw flange down. Attach panel with appropriate fasteners through screw flange making sure panel is snug into trim. Do not overtighten fastener as panel should be able to float on the wall (Fig.20).

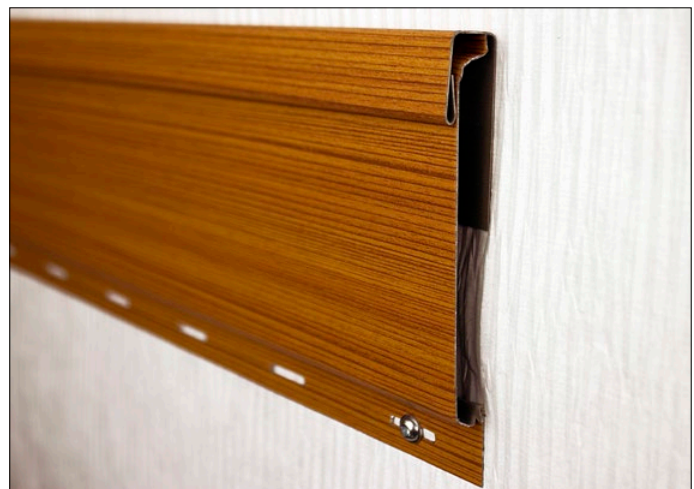


Fig.20

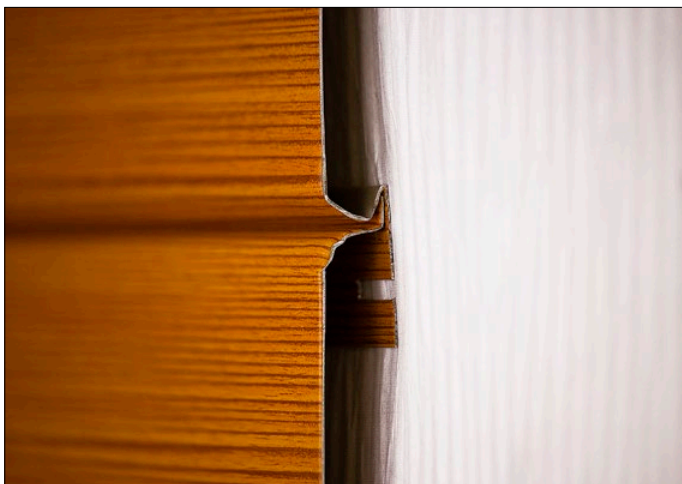


Fig.21

Continue the installation by inserting the next panel's tongue snugly into the groove of the previous panel, ensuring that it is fully seated. Continue until you reach the last piece, which may be trimmed to fit if necessary (Fig.21).