

Wall Installation - Full Corners

Install corners prior to the installation of LUX panels as demonstrated in the following diagrams. Install on inside and outside corners as required. When installing LUX panels in a vertical application start at the inside or outside corner and work towards the open trim. When installing panels on a closed wall with two corners, install inside corner or outside corner on one end, then install panels and trim on other end over top such as an open corner.

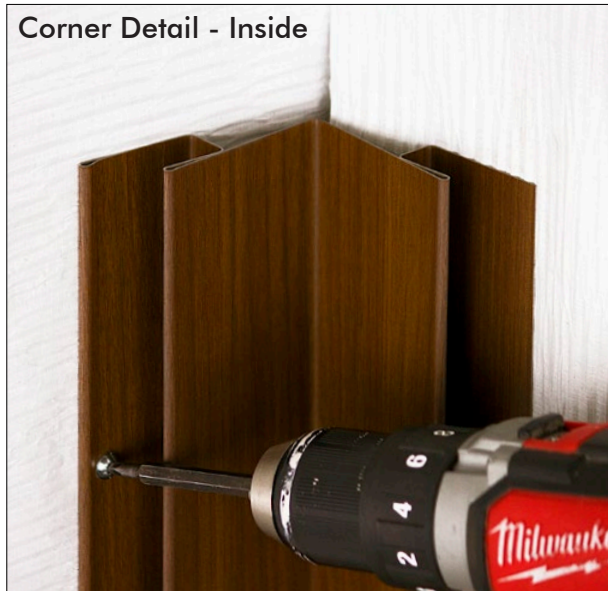


Fig.56

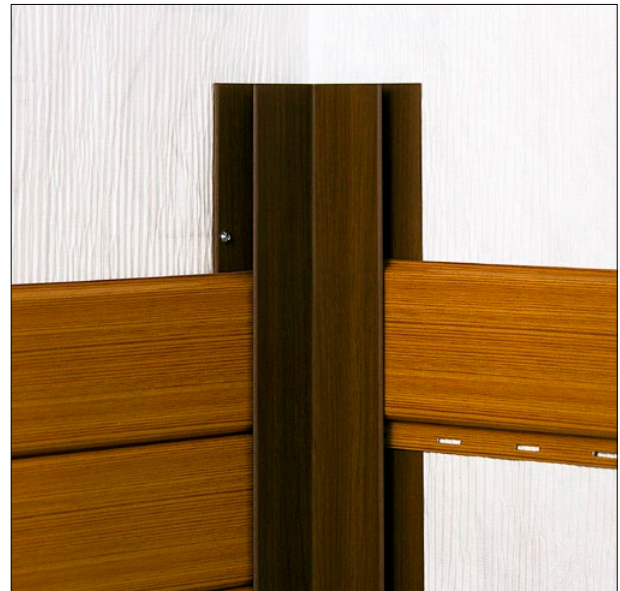


Fig.57

Inside corner: Step 1: Set the inside corner (#707) in place and fasten (Fig.56).
Step 2: Set the standard panels in place and fasten (Fig.57).

Outside corner: Step 1: Set the outside corner (#706) in place and fasten (Fig.58).
Step 2: Set the standard panels in place and fasten (Fig.59).

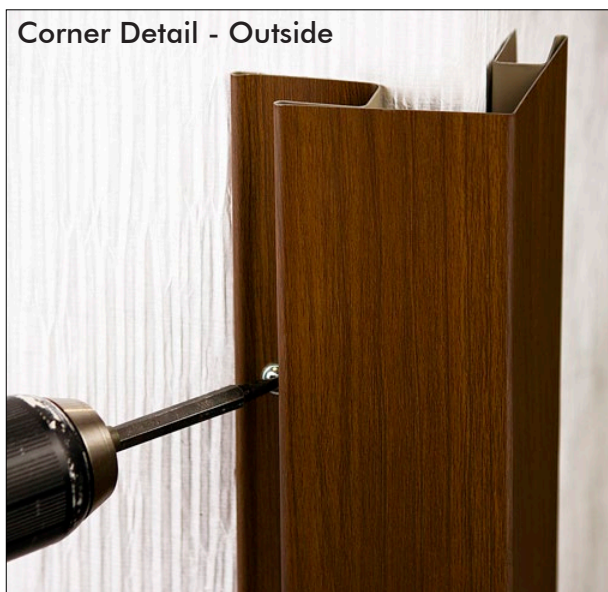


Fig.58

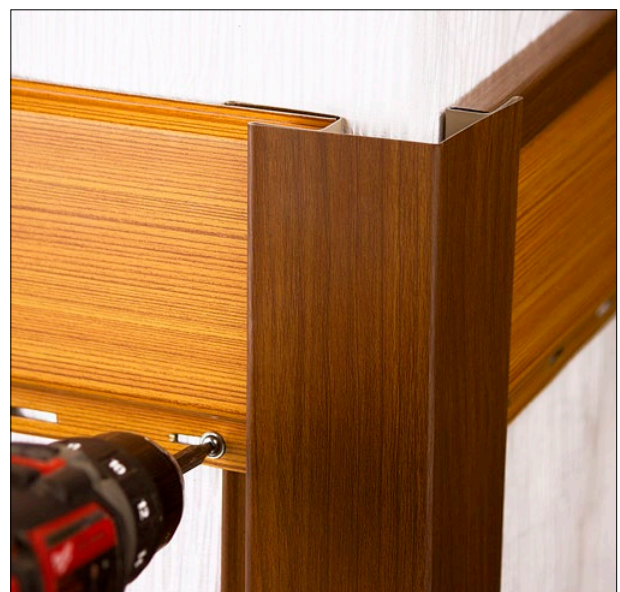


Fig.59