

Wall Installation - Snap T Corners

Inside Snap T Corner 45 - The exclusive LUX Snap T corner 45 gives a unique narrow angle to an inside finished corner. Figure 76 demonstrates the unique profile of the Snap T 45 and its innovative design. Figure 77 demonstrates the aesthetic of the finish Snap T 45 and the clean lines of the finished product.



Fig.76



Fig.77

Step 1: Pre-drill installation holes at a minimum of 10 inches apart. (see Fig.78).

Step 2: Ensure that the corners of the LUX Snap T corner are square with the substrate of the wall then fasten with specified screw (Fig.79).



Fig.78

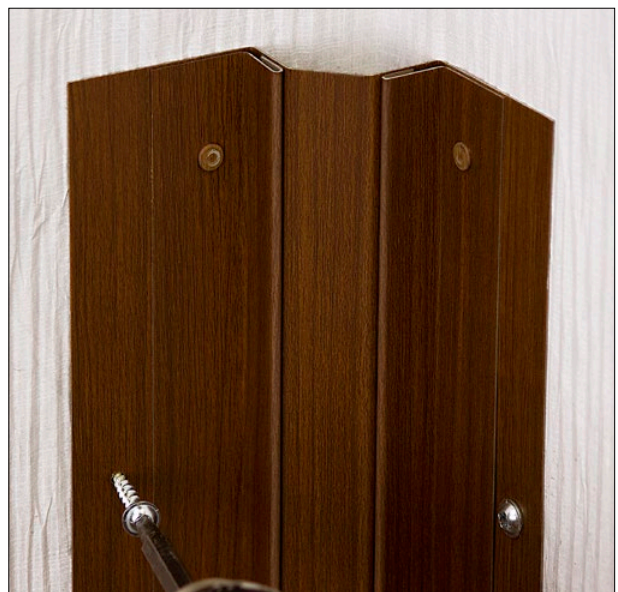


Fig.79

Wall Installation - Snap T Corners

Step 3: Because the LUX Snap T is a truly straight and accurate corner, variations in the substrate will have to be accommodated for when installing the corner and shimming may be required to adjust for substrate variances.

Step 4: Install standard panels and fasten (Fig.80).



Fig.80



Fig.81

Step 5: Place one end of the Snap-T corner in channel and gently tap into place with rubber mallet (Fig.81).

Step 6: Place the other end of the Snap-T corner in channel and gently tap into place with rubber mallet (Fig.82).

Step 7: Ensure that the corner pieces are snug and correctly aligned for your application (Fig.83).

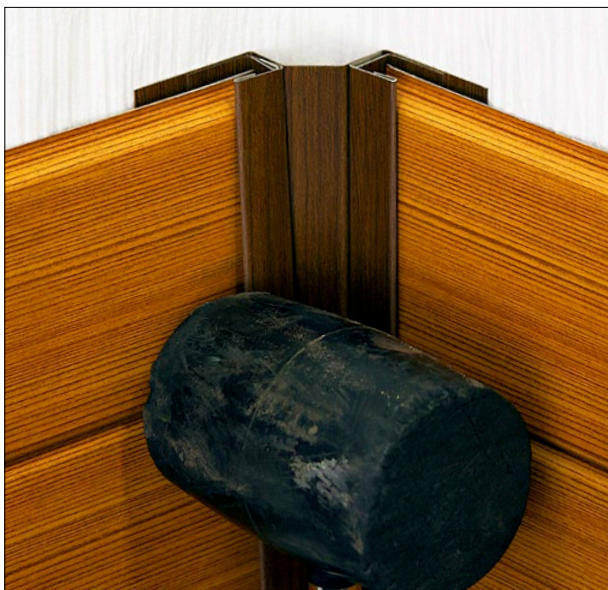


Fig.82

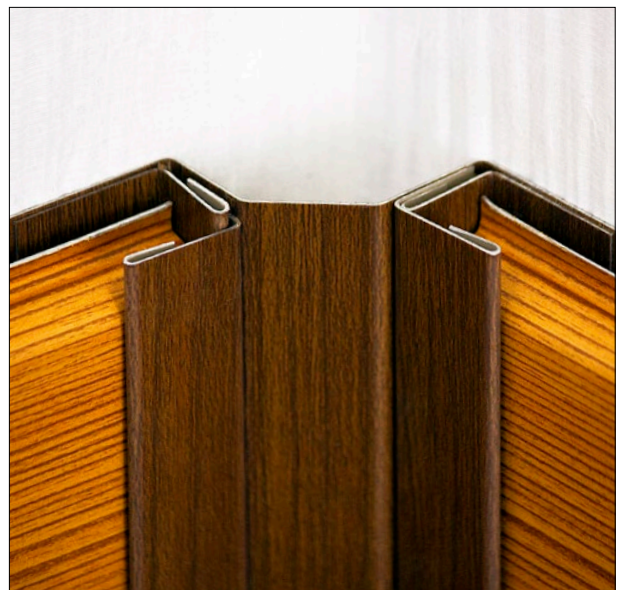


Fig.83