

Wall Installation - Finishing Panels

Finishing the last panel horizontally or vertically.

*Horizontal Installation is demonstrated and vertical installation is similar.

Step 5: Add small amount of silicone sealant between the finished panel and the underside off-cut support panel (Fig.30).

Step 6: Install the off-cut piece into trim with the cut portion against the inside edge of the trim piece (Fig.31).



Fig.30



Fig.31

Step 7: Snap top cover of two piece J into place by applying pressure or tapping with a rubber mallet (Fig.32).

Step 8: Ensure the trim is seated and flush with panel (Fig.33).

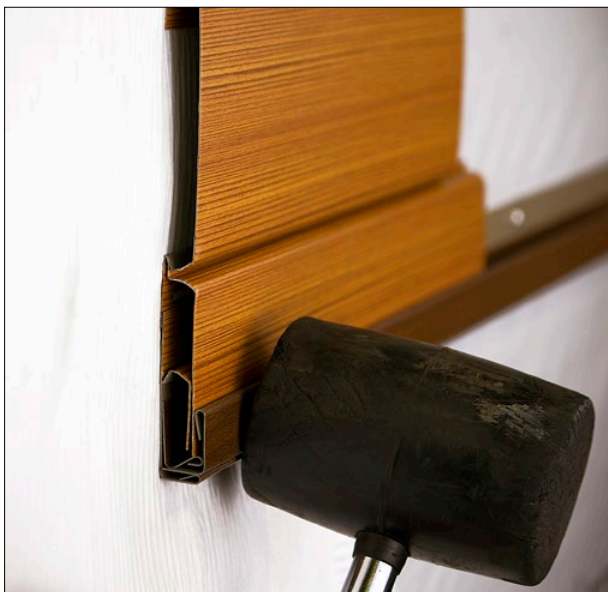


Fig.32

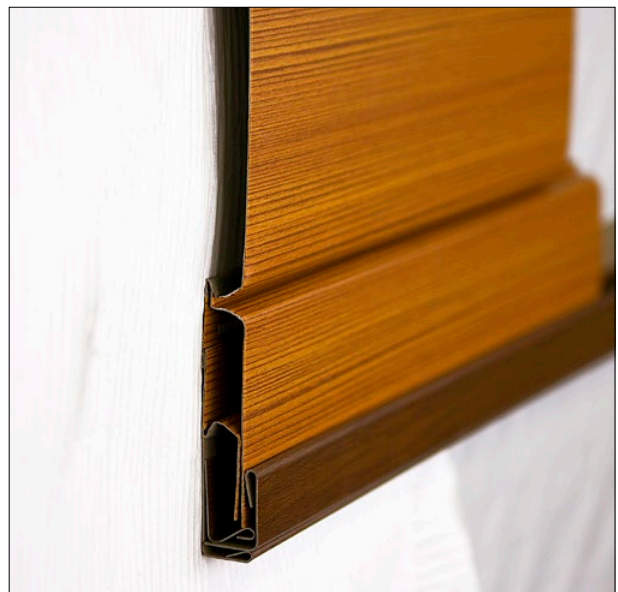


Fig.33